
CONTEMPRA 3 - SERIES

ASSEMBLY INSTRUCTIONS FOR SOLID COVER

BUL10128 REV. A

PAGE 1 OF 1

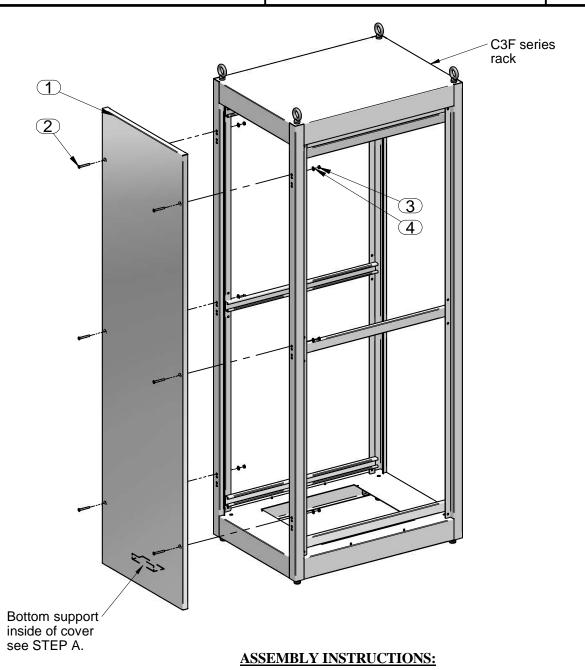

PARTS LIST		
ITEM No.	DESCRIPTION	QTY
1	SIDE PANEL	1
2	1/4-20 X 3/4 HEX BOLT	12
3	1/4 SPLIT LOCK WASHER	12
4	2.5" HEX SPACER	4
5	NUT 1/4-20	4

TOOL BOX

#2 Phillips Screw Dr

#2 Phillips Head 3/8 or 7/16 Socket Screw Driver Wrench



- A) Mount solid cover (item 1) onto rack frame. Bottom support on cover rests on bottom of rack frame. This will help to position cover.
- B) Using the 1/4-20 screw, flat washer and HEX nut (items 2, 3 & 4) secure cover to rack thru existing latch and hinge holes. Use top hole in each cluster for mounting.



visit our website @ www.hammondmfg.com